



## 1/72 BERGPANZER 3 AND 4 CONVERSION INSTRUCTIONS

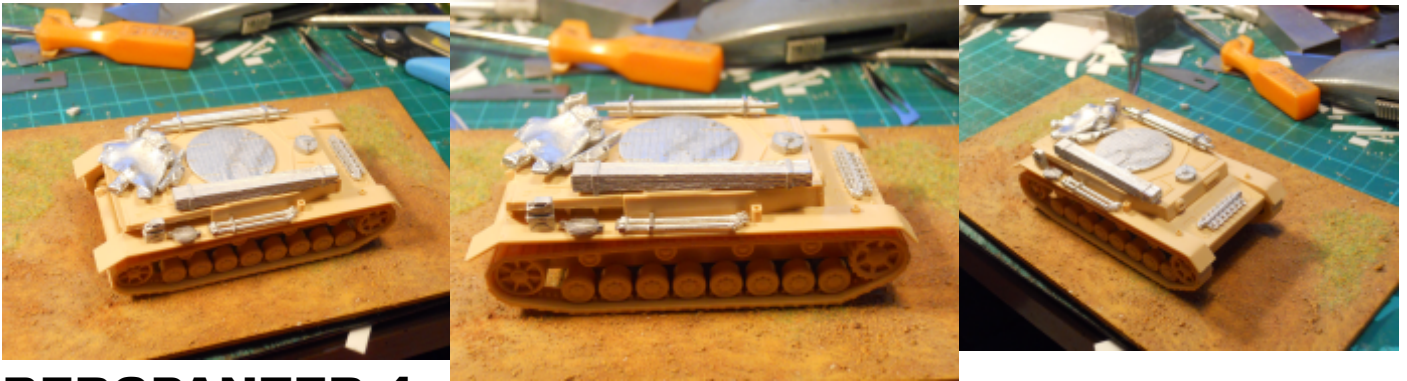

### BERGPANZER 4

NOT MANY OF THESE CONVERSIONS WERE MADE IN THE LATER PART OF WW2. THEY WERE SIMPLY REDUNDANT PZ4 HULLS, THE TURRET WAS REMOVED AND THEY WERE FITTED WITH VARIOUS RECOVERY EQUIPMENT AND A SMALL 'A' FRAME CRANE AND SOME PULLEY BLOCKS.

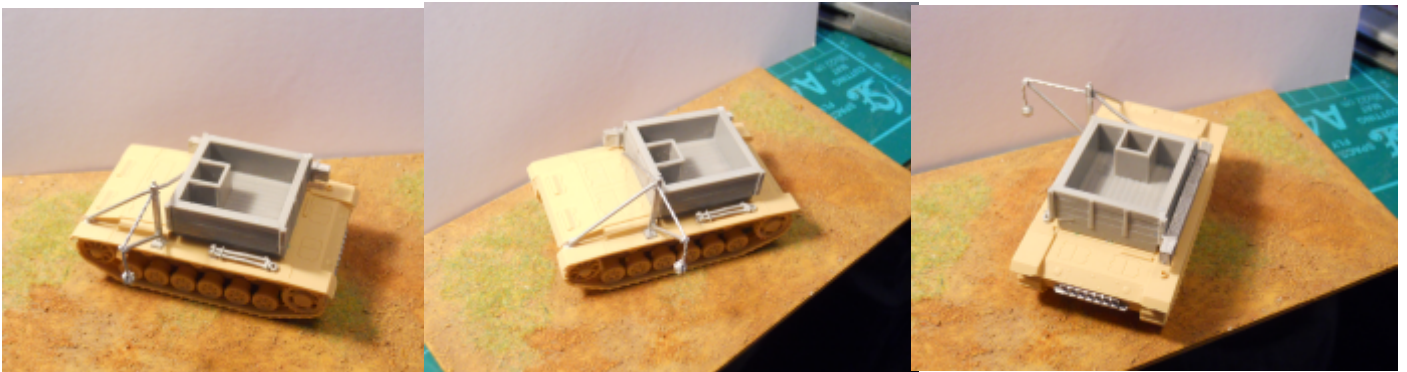

### BERGPANZER 3

THIS WAS A FAR MORE NUMEROUS CONVERSION ON A REDUNDANT PANZER 3 HULL.

THE TURRET WAS REMOVED AND A BOX SUPERSTRUCTURE WAS PUT IN ITS PLACE HOLDING TOOLS, GAS BOTTLES AND VARIOUS TOOLS ECT. IT ALSO HAD AN 'A' FRAME CRANE AND VARIOUS RECOVERY GEAR.

#### SAFETY:-

THESE MODELS CONTAIN LEAD AND SHOULD NOT BE EATEN OR CHEWED OR HANDLED BY CHILDREN.

ALWAYS WASH HANDS AFTER HANDLING BARE METAL AND DO NOT BREATHE IN THE RESIN DUST. SAND DOWN ANY RESIN PARTS UNDER WATER IN A SHALLOW BAKING TRAY.

<http://sandsmodelsshop.com/>  
[sales@sandsmodels.com](mailto:sales@sandsmodels.com)

