

S & S MODELS

MASTIFF BAR ARMOUR


LIST OF PARTS:-

- 1 X FRONT PIECE
- 2 X SIDE PIECES (REAR)
- 2 X SIDE PIECES (FRONT)
- 1 X REAR PIECE
- 2 X REAR CORNER PIECES
- 2 X CAB PIECES

SAFETY WARNING:-

THIS MODELS CONTAINS LEAD AND SHOULD NOT BE EATEN OR CHEWED!
WASH HANDS AFTER HANDLING ALL METAL PARTS.




FIX THE FRONT ARMOUR TO THE FRONT OF THE MASTIFF, THIS REPLACES THE ORIGINAL MASTIFF BUMPER

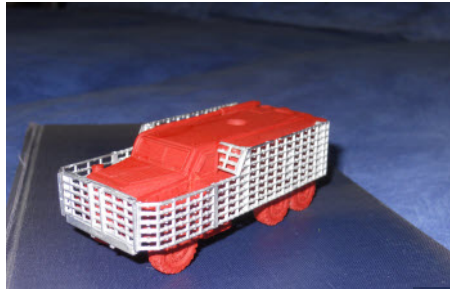

FIX THE 2 SIDE PIECES TOGETHER,




THEN FIX THE CAB ARMOUR TO THE SIDE (REPEAT THE SAME FOR THE OTHER SIDE)

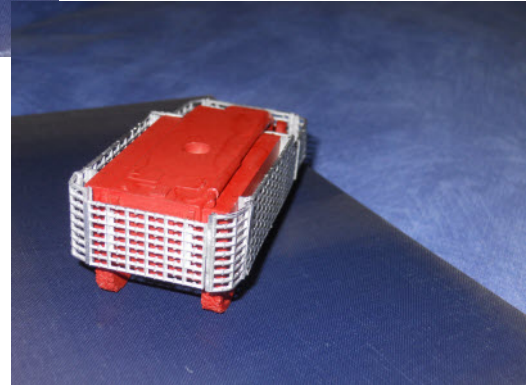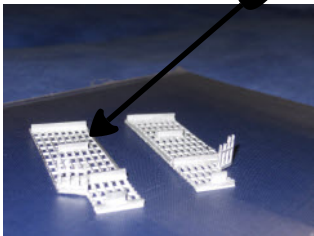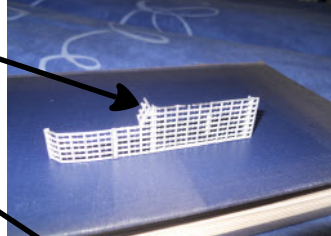

FIX THE 2 SIDE PIECES TO THE FRONT BUMPER/ARMOUR ON THE FRONT OF THE MASTIFF .
THERE ARE 3 MAIN FIXING BARS ON THE LARGER OF THE 2 SIDE PIECES.




THEN FIX THE 2 CORNER PIECES TO THE ALREADY FIXED SIDE PIECES AND THEN ATTACH THE REAR ARMOUR TO THE CORNER AND FIX TO THE REAR OF HULL.

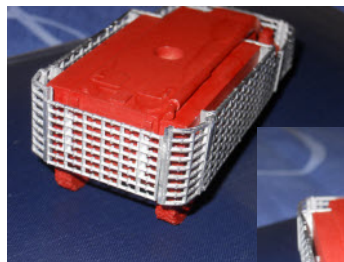

THE FINISHED VEHICLE SHOULD LOOK LIKE THIS

THE REAR SHOULD LOOK LIKE THIS

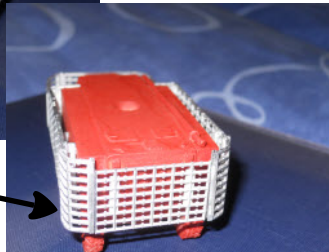

NOTE:-

I WOULD RECOMMEND ROUGHENING UP THE METAL PARTS BEFORE ASSEMBLY TO AID THE GLUE TO ADHERE.



S & S MODELS

22 BRIAR CLOSE

BURNHAM ON SEA

SOMERSET TA8 1HU

www.sandsmodels.com

sales@sandsmodels.com